




GENERAL DESCRIPTION

- Revo S has been specifically designed to save space and labour
- These simple units can be connected with REVO PC to manage multizone system this minimize your energy cost by controlling synchronization and power limit on each zone
- Integrated fuse + fuse holder is necessary to have a complete power control zone including current transformer and optional circuit board
- Flat Cable Wiring System (option) to connect in plug in mode many Revo S when HB alarm or analog input are used
- Input signal: SSR, Analog as an option
- Zero Crossing, Burst Firing available at 4, 8 or 16 Cycles at 50% of Power demand
- Electronic fully isolated from power with constant current drain on input.
- Heater Break alarm option to diagnose partial or total load failure and Thyristor Short circuit
- Total Load Failure Alarm at low cost it's also available
- Fuse and Fuse holder available as an option
- Current transformer integrated (with Heater Break option)
- Special design for Heat sink with very high dissipation value
- Comply with EMC, cUL (pending)
- DIN RAIL side by side mounting
- IP20 Protection

TECHNICAL SPECIFICATION

Voltage power supply	24V minimum up to 480V, 600V On request		
Voltage Frequency	50 or 60 Hz no setting needed from 47 to 70 Hz		
Nominal Current	30A, 35A, 40A		
Input Signal	SSR for REVO S, No Fuse,	5:30Vdc	9mA Max (On ≥ 5Vdc Off ≤ 4Vdc);
	SSR for REVO S, Fuse + Fuse Holder	7:30Vdc	9mA Max (On ≥ 7Vdc Off ≤ 6Vdc);
	SSR for REVO S, Fuse + Fuse Holder,+ HB	4:30Vdc	5mA Max (On ≥ 4Vdc Off ≤ 1Vdc);
	Voltage input	0:10Vdc	impedance 15 K ohm;
	Current input	0:20/4:20mA	impedance 100 Ohm;
Firing	Zero Crossing, Burst Firing with analog input signal only		
Auxiliary Voltage Supply	12:24V dc/ac (max 70 mA) required only with HB Alarm or Analog Input Option		
Heater Break Alarm	Partial Load Failure Alarm Microprocessor based with automatic setting via Digital Input; Relay Output 0,5A at 110V Total Load Failure Alarm at low cost it's an alternative at standard HB		
Mounting	DIN RAIL or panel mounting		
Operating Temperature	40 °C without derating. Over this temperature see below derating curve		
Storage temperature	-25 °C to 70 °C Max		
Altitude	Over 1000 m of altitude reduce the nominal current of 2% for each 100m		
Humidity	From 5 to 95% without condense and ice		

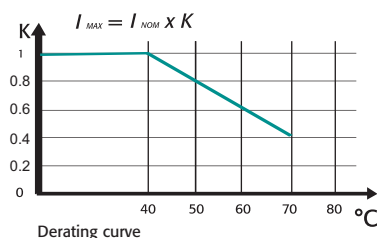

OPTION'S FEATURES AND SPECIAL DETAILS

HEATER BREAK ALARM (HB)


ON FRONT CABINET



FEW SECOND TO SET AND CALIBRATE ALL THE UNITS

- Microprocessor based circuit
- Capacity to diagnose the failure of one Resistance over five in parallel
- Load failure alarm with LED indication on front unit
- Thyristor short circuit alarm with LED indication on front unit
- Alarm output with free voltage relay contact
- Alarm reset function and possibility to auto reset if the alarm disappear
- Built in Current transformer when heater Break option has been selected
- Self Setting via external command or push button on front unit
- Common setting command can be given to many units and in a matter of second, the tuning is done, also by a non expert operator
- It's also available, at low cost, an HB Alarm for Total Load Failure

HOW TO ADD POWER LOAD MANAGEMENT AND FEATURES TO YOUR SIMPLE UNITS

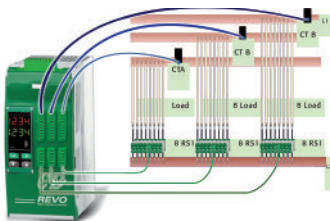

APPLICATION WITH 8, 16 OR 24 SINGLE PHASE LOADS


Use REVO-PC and you can add these Features

- Communication with different field bus
- Reading of current Voltage and Power
- Instantaneous power very close to average value, no pick power
- Power factor close to one no harmonics
- Prevents increase in energy supply tariffs imposed by your electricity supplier


Synchronization

On all controlled zones, REVO-PC Synchronization is automatic resulting in superior performance:

- Total current is equal to a sinusoidal wave form.
- Power factor > 0,9.
- Instantaneous current close to average value.
- Cancellation of harmonics.
- Flickering effect removed.

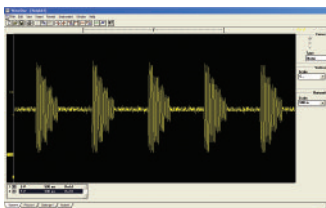

WITHOUT POWER CONTROL OPTIMISATION

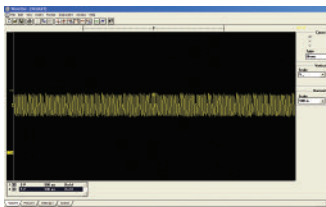

WITH POWER CONTROL OPTIMISATION


Smart power limitation

- Smart power limitation works together with synchronization. If this function is enabled, REVO-PC makes a live calculation of power at each period and generates the output values for the next period. If the calculated power is below the power limit value, the previous values remain with each channel using full power.
- If the power is above the power limit value, the setpoint of each channel is reduced proportionally to restrict power overshoot. This function significantly reduces disturbances on the main network compared to a full power system, preventing any increase in energy tariffs imposed by the electricity supplier.
- This function can be activated/deactivated and the limit value changed at any time.

ORDERING CODES REVOS PC

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
REVO-PC	R	P	C	-	-	-	-	-	-	-	-	-	-	-	0	0	0
4,5 Channels	Description code		Numeric code														
	8 Channels (for 8 Off one phase unit)		0 8														
	16 Channels (for 16 Off one phase unit)		1 6														
	24 Channels (for 24 Off one phase unit)		2 4														
	8 Channels for 2-3PH		3 8														
6 Current Sensor	Description code		Numeric code														
	50/0,05 A		1														
	100/0,05 A		2														
	150/0,005 A		3														
	200/0,05 A		4														
	250/0,05A		5														
	400/0,05A		6														
	80070,05A		7														
7 Communication	Description code		Numeric code														
	Ethernet		1														
	ModBus Slave		2														
	ModBus Master		3														
	Profibus		4														
	Profinet		5														
8 Primary Voltage Aux. Transformer	Description code		Numeric code														
	Transformer 24V		1														
	90:130V		2														
	170:265V		3														
	230:345v		4														
	300:530V		5														
	510:690V		6														
	600:760V		7														
9 Firing	Description code		Numeric code														
	Half Cycle at 50% power demand		1														
	One Cycle at 50% power demandModBus		2														
10 Feed Back	Description code		Numeric code														
	No feedback		1														
	Power		2														
11 Approvals	Description code		Numeric code														
	CE EMC		1														
12 Manuals	Description code		Numeric code														
	None		0														
	Italian Manual		1														
	English Manual		2														
	German Manual		3														
	French Manual		4														
13 Version	Description code		Numeric code														
	Version 1		1														


WIRING CONNECTION REVO S 1PH from 30 to 40A

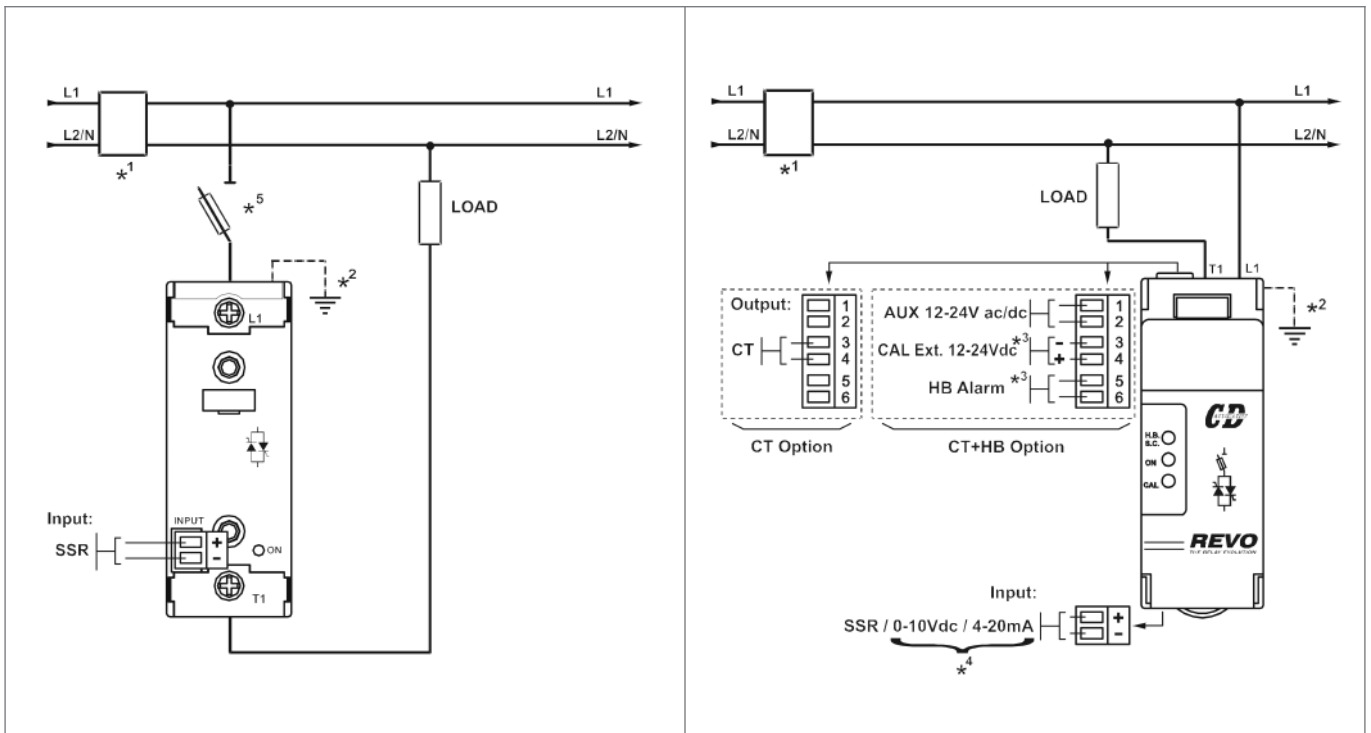

NOTE


- (1) • A suitable device must ensure that the unit can be electrically isolated from the supply, this allows the qualified people to work in safety.
- (2) • The heat-sink must be connected to the earth.
- (3) • Only for the HB option
- (4) • Only for the Analog Input option.
- (5) • Use the extrarapid fuse with low I^2t .

DIMENSION AND FIXING HOLES

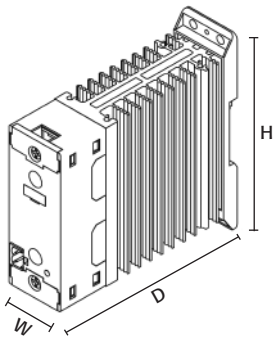


SR3 W 36mm. - H 121 mm. - D 125 mm. - kg. 0,44

REVO S, No fuse 30A ÷ 40A

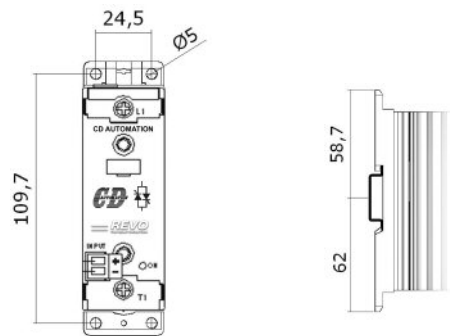


REVO S 30A ÷ 40A

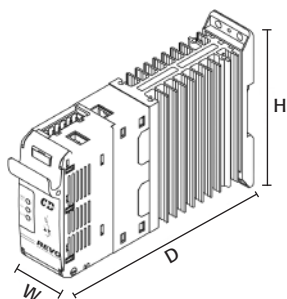

SR6 W 36mm. - H 121 mm. - D 185 mm. - kg. 0,61

REVO S, with Fuse Holder 30A ÷ 40A

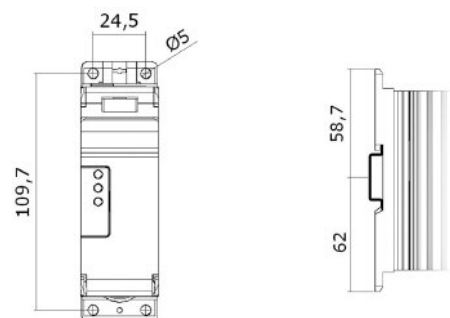

REVO S 30A ÷ 40A

OUTPUT FEATURES (POWER DEVICE)

Nominal current in continuous service:	30A, 35A, 40A
Max peak current (10ms)	400A for unit type 030 600A for unit type 035 800A for unit type 040
Voltage range:	24÷600V
Repetitive peak reverse voltage:	1200V (480V), 1600V (600)
Latching current:	250mA
Leakage current:	15mA eff
I^t value tp=10msec:	780A ² /S for unit type 030 1750A ² /S for unit type 035 3110A ² /S for unit type 040
Frequency range:	47÷70Hz
Power loss (I=Inom):	38W for unit type 030 44W for unit type 035 50W for unit type 040
Isolation Voltage:	2500Vac

ORDERING CODES REVOS 1PH

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
REVOS 1PH	R	S	1	-	-	-	-	-	-	-	-	-	-	-	-	-

4, 5, 6 Current		8 Aux. Voltage supply		11 Control Mode		14 Approvals	
Description code	Numeric code	Description code	Numeric code	Description code	Numeric code	Description code	Numeric code
30A	0 3 0	No Aux. Voltage, without HB and/or without Analog Input	0	Open Loop	0	CE EMC For European Market	0
35A	0 3 5	12:24V ac-dc 70mA, with HB and/or Analog Input	4	12 Fuse & Option		cUL For American Market, pending	L
40A	0 4 0			Description code	Numeric code		
7 Max Voltage		9 Input		No Fuse	0	15 Manual	
Description code	Numeric code	Description code	Numeric code	Fuse + Fuse Holder (1)	F	Description code	Numeric code
480V	4	SSR	S	Fuse + Fuse Holder +CT (1)	Y	None	0
600V	6	0:10V dc	V	Fuse + Fuse Holder +CT +HB (1)	H	Italian Manual	1
		4:20mA	A	Fuse + Fuse Holder +CT +HB		English Manual	2
		10 Firing		+Flat Wiring System	X	German Manual	3
Description code	Numeric code	Description code	Numeric code	13 Fan Voltage		French Manual	4
Zero Crossing ZC	Z			Description code	Numeric code	16 Version	
Burst Firing				No Fan	0	Description code	Numeric code
4 Cycles On at 50% Power Demand	4 (3)					Std with or without fuse + Fuse Holder	1
Burst Firing						Second Fuse (1)	2
8 Cycles On at 50% Power Demand	8 (3)					Second Fuse with additional Safety Relay to open in alarm in conditions (2)	3
Burst Firing							
16 Cycles On at 50% Power Demand	6 (3)						

LEGEND
CT = Current Transformer
HB = Heater Break Alarm

Note (1): If you need one REVOS-1PH with 2 Fuse&Fuse Holder (Second Fuse), for dimensions see REVOS-2PH (SR7).

Note (2): If you need one REVOS-1PH with 2 Fuse&Fuse Holder + safety relay, for dimensions see REVOS-2PH (SR7).

Note (3): Available only with Analog input

